 


Smart Microphone AW310

User Guide

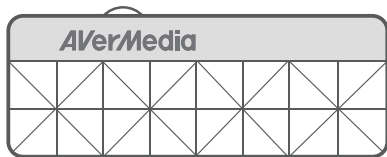

English	Magyar
Deutsch	Polski
Français	Česky
Italiano	Русский
Español	Türkçe
Português	한국어

Disclaimer

All the screen shots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

Copyright and Trademark Information

©2015 by AVerMedia Technologies, Inc. All rights reserved. No part of this publication, in whole or in part, may be reproduced, transmitted, transcribed, altered or translated into any language in any form by any means without the written permission of AVerMedia Technologies, Inc. Information and specification contained in this manual are subject to change without notice and do not represent a commitment on the part of AVerMedia.

For more information, please refer to www.avermedia.com. "AVerMedia" is a trademark or registered trademark of AVerMedia Technologies, Inc. The pictures contained in this manual are provided for reference purposes only.

Made in Taiwan (Except Accessories).

Benelux – AVerMedia Technologies Europe

Address Kwartsweg 50, 2665 NN Bleiswijk, The Netherlands
Website <http://www.avermedia.com/support/>
Telephone +31-10-7600-500

Headquarters

Address No.135, Jian 1st Rd., Zhonghe Dist., New Taipei City 23585, Taiwan
Website <http://www.avermedia.com>
Telephone +886-2-2226-3630

Important Safety Instructions and Disclaimer

 **WARNING:** Failure to follow these safety instructions could result in fire, electric shock, other injury or damage to device or other property, and/or loss of life. AVerMedia is not responsible for damage or injury arising from failure to follow safety instructions relating to the product's use.

General Guidelines and Warning

- Read and follow these instructions.
- Do not use the device on uneven or unstable surfaces.
- Do not use this device in a wet environment or near water.
- Unplug the device before cleaning. Clean only with a dry cloth.
- Use in a well ventilated environment. Do not block any ventilation openings.
- Use the device within the specified temperature range.
- Use power sources within the specified voltage range.
- Do not place heavy objects on the device.
- Do not install near heat sources such as radiators or stoves.
- Do not defeat the safety purposes of the polarized or grounding-type plug.
- Protect the power cord from being walked on or pinched, particularly where the cord connects with plugs or adapters.
- Only use the attachments and accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for prolonged time.
- Do not modify or disassemble the device in any way.
- Refer all servicing to qualified personnel.
- Do not dispose the device as general household waste. Dispose in accordance with local environmental laws.

General Battery Instructions

- Never short circuit the battery terminals.
- Store the batteries in a cool dry place.
- Keep the battery away from children.
- Keep the battery away from fire.
- Stop using or charging the battery immediately if the battery becomes or appears

damaged, gives off an odor, becomes discolored or deformed, starts to balloon or swell, leaks.

- Never store or charge the battery inside your car or in extreme temperature. Extreme temperatures might ignite the battery and cause fire.
- Do not dispose of used batteries in domestic waste. Dispose of batteries at special collection points or return to point of sale if applies.

Lithium Polymer Battery

- Attempting to disassemble or modify the battery can cause an explosion or liquid leakage from the battery. If the rechargeable battery is incorrectly replaced, there is danger of an explosion.
- The battery contains a small amount of harmful substances. To avoid possible injury, replace it with a battery type recommended by AVerMedia.
- The battery's working temperature is between 0°C and 35°C, be sure to operate the device within this range. Do not expose it to direct sunlight as it could cause overheating, rupture, or even fire.
- Even if the battery is fully charged and not in use, it will still discharge gradually over time. If you haven't used the device for a while, it is recommended to recharge it before use.
- Batteries are consumable supplies. Their power capacities degrade gradually after repeated charging. Therefore, even when you charge it fully every time, the usage time will still reduce and batteries will eventually die out.
- When the device is in use or charging, it is normal for it to get warm.
- Never charge the battery unattended. During the entire process of charging your battery, you must constantly observe and monitor the charging process so that you can quickly react to any problems that may occur and to be certain that the battery is being charged properly.
- The battery should be stored at room temperature, charged to approximately 30 to 50% of capacity at least once per year to prevent over-discharge.
- Do not discharge the battery at a rate exceeding the maximum continuous discharge current specified for it. Otherwise, the battery will overheat and result in battery deterioration, bursting, ballooning, or possibly cause a fire or explosion.

Limited Warranty

AVerMedia warrants that the Product is free from defects in material and/or workmanship under normal use.

AVerMedia does not warrant that the operation of the Product will be uninterrupted or error-free. The Limited Warranty does not cover:

- The warranty period has expired;
- Product that has (a) serial numbers or the warranty sticker that have been removed, tampered, damaged or altered, or (b) nonconforming.
- Product purchased from an unauthorized distributor;
- Product has been tested, altered, modified, repaired or serviced by someone other than AVerMedia (or its authorized service centers);
- Failure to adhere to user's manual.
- Product that are operated in combination with third party's software which may be obtained by user or provided by AVerMedia in the product packaging.
- Product that are operated in combination with third party's device(s)/equipment(s), or the damage is caused from computer viruses
- Damage caused by (a) misuse, abuse, neglect, improper use of the physical or operating environment (such as the exterior ruptures, moisture, exposure to temperature, high or low humidity, power overload, placement subject to extreme environments that include a lack of ventilation or stacking, throwing, soakage, etc.) or modification; (b) improper or unauthorized installation, wiring, repair, testing; (c) use of the Product outside AVerMedia published guidelines; (d) accident, fire, acts of God or force majeure such as natural disasters, environmental distress, or lightning; power surges; (e)improper maintenance or failure to use the information content in accordance with the Product.
- Other than the above, similar circumstances not attributable to AVerMedia.

Warranty Period

The term of the warranty begins from the date of purchase. Your dated sales receipt showing the date of purchase is the proof of purchase. The warranty period varies by product and is generally 1 or 2 years; consult your original AVerMedia product packaging or user information provided by AVerMedia and local in-country distributor at the time of purchase for the warranty term specific to your product ("Warranty Period").

How to Obtain Warranty Service – Contact Your Local In-Country Distributor

- To obtain warranty service, an original or copy of the sales receipt from the original retailer is required.
- A separate warranty may be provided by international distributors. This warranty is provided by the local in-country distributor and this distributor provides local service for your device. Distributor warranties are only valid in the area of intended distribution.
- When a Product or part is replaced, the replacement item becomes your property and the returned product or part becomes the property of AVerMedia or its distributor.

Usage of Personal Contact Information

If you obtain service under this warranty, you agree to and fully authorize AVerMedia or its distributor to store, use, and handle information related to the warranty service, as well as your personal contact information, including but not limited to your name, phone number, address, and email. AVerMedia or its distributor requires this information to perform the necessary service set forth by this warranty. For warranty service and outcome satisfaction, AVerMedia reserves the right to contact you in order to understand the problems that occur during usage of the product; the company may also notify you about any product recalls or safety issues. To achieve satisfactory results, you agree to fully license AVerMedia to transfer his/her customer information to the country or region of the original purchase. This allows AVerMedia to undertake the scope of product or parts maintenance of the warranty service. AVerMedia may also disclose this information under certain legal requirements.

How to Provide Warranty Service

Services may vary by geographic region, please contact AVerMedia or its distributor for a response regarding the appropriate services for your Product. The Warranty Service may be provided by the following types.

a. Customer Delivery Service

According to "Customer Delivery Service," the customer must pay for their own product to be delivered to a designated service center for repair or replacement, and all risks are borne by the customer. The customer may retrieve the product after the repair or replacement process has been completed. Should the customer fail to collect the product, the company will handle the product as it sees fit without incurring any liability.

b. Mail-In Service

According to "Mail-In Service," customers will be required to pay for their own products to be mailed to a designated service center for repair or replacement, and all the risks are borne by the customer. After the product has been repaired or replaced, AVerMedia will send the product back to the customer at their own expense and bear all risks, except where otherwise specified by service dealers.

c. Customers' Two-Way Mail Service

According to "Customers' Two-Way Mail Service," customers will be required to pay for their own product to be delivered to a designated service center for repair or replacement, and all the risks are borne by the customer. After the product has been repaired or replaced, the product will be returned to the customer, for which all delivery and other risks are borne by the customer. If the customer fails to arrange for the return transport of the product, the company will handle the product as it sees fit without incurring any liability.

No On-Site Service

AVerMedia and its distributor do not provide on-site service, including but not limited to, installation, maintenance, instructing, troubleshooting problems, the usage of the product or the warranty service. In the event that calling, updating software, or other means fail to resolve the issue, AVerMedia and its distributor will arrange warranty service as specified under "Scope of Warranty Services (a)."

Limitation of Liability

AVerMedia accepts responsibility for the damage of loss of products only under the following circumstances: when the company has a product in store or when a product is being transported by the company.

If any information contained in the product (including confidential information, proprietary information, or personal information) is missing or revealed, AVerMedia or its service dealers are without responsibility.

Under any circumstances, if the solutions proposed under the warranty have not fulfilled its basic purpose, AVerMedia, its subsidiaries, suppliers, and dealers do not assume any burden of liability: (a) loss, damage, or disclosure of client data; (b) special damages, incidental damages, punitive damages, or consequential damages,

including but not limited to loss of profits, loss of business revenue, goodwill, or anticipated damage to balance loss, and even if the possibility has been raised, whether the claim is based on contract, warranty, negligence, strict liability, or other liability. Under the circumstances that AVerMedia, its subsidiaries, suppliers and distributors assumes responsibility for damages caused by any reason, the amount of its total liability shall not exceed the actual payable of direct damages, nor shall it exceed the amount paid by the customer for the product.

Prejudice to the foregoing restriction does not apply to personal injury or death caused by injury, nor does it apply to the compensation required by law for AVerMedia to assume with regards to real or tangible property.

Where the law does not exclude or limit incidental or consequential damages, the above limitations or exclusions may not apply to the customer.

Other Rights

This warranty provides the customer with specific legal rights. The customer may be subject to jurisdiction in accordance with the relevant laws in his or her district, but the customer is subject to the laws and regulations that govern the country or state where the product was originally purchased. This warranty does not affect any legal rights, including the limitations or exclusions laid out by this contract; instead, the control of the consumer goods sold is governed by the relevant laws or regulations born of consumer rights.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Warranty

Your battery is guaranteed to be free of manufacturer's defects at the time of purchase. Batteries that have been mishandled, abused, or damaged by the user are not covered under warranty. AVerMedia Technologies, Inc. is not liable for any loss or damage, whether direct or indirect, incidental or consequential, or from any special situation, arising from the use, misuse, or abuse of this product.

In the Box

EN




Microphone




Receiver



 Quick Installation
Guide



USB Power Adapter

 

USB Power Cable



3.5 mm to 6.3 mm
Audio Cable

 


Carrying Bag



Lanyard

Microphone

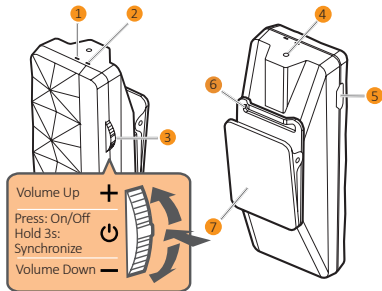


- ① Battery LED
- ② Power LED
- ③ Multi-function switch
- ④ Sound inlet (II)
- ⑤ USB power port
- ⑥ Lanyard hole
- ⑦ Clip

**Microphone / Receiver
Power LED**

Solid: On

Flashing: Synchronizing

 Receiver

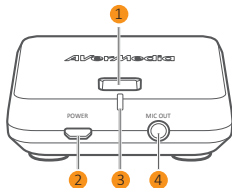


- ① Power button
- ② USB power port
- ③ Power LED
- ④ 3.5 mm mic out port



Press to turn On/Off.

Press and hold 3 sec to synchronize.

 Installation

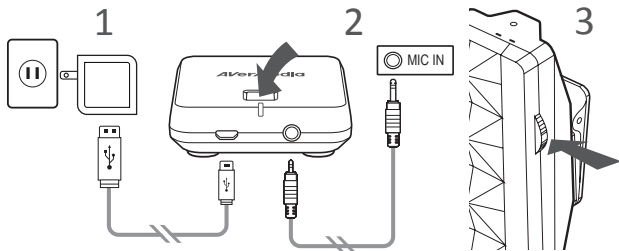


Note: To avoid excessive sound on initial sound test, lower your audio system volume first.

- 1 Connect the receiver to a power outlet.
- 2 Connect the receiver to a microphone input. Press the Power button.
- 3 Turn on the microphone and start using. *

* If both Power LEDs continue to flash, re-synchronize the microphone and receiver by pressing both power buttons simultaneously for 3 seconds and wait until the LEDs turn solid.

 Charging

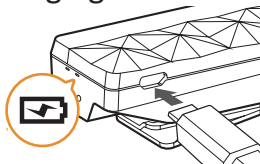

 Battery LED

Flashing: Low Battery

Solid: Charging

Off: Fully Charged


Note: Fully charge your microphone before first use.

Pendant Form

1 Remove the clip.


2 Attach the lanyard.

 3 Place it around your neck.

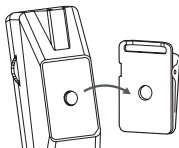

Clip Form

 1 Rotate the clip.




2 Clip it on.



In der Packung

 DE




Mikrofon



Empfänger



 Schnellstartanleitung



USB-Netzteil



USB-Stromkabel



3,5 mm bis 6,3 mm
Audiokabel

 


Tragetasche



Umhängeband

Mikrofon

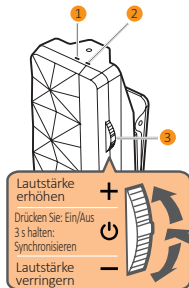


- 1 Batterie-LED
- 2 Netz-LED
- 3 Multifunktionsschalter
- 4 Sound-Eingang (I/O)
- 5 USB-Stromanschluss
- 6 Umhängeband-Öffnung
- 7 Clip

**Mikrofon / Empfänger
Netz-LED**

Stabil: Ein

Blinken: Synchronisieren

 Empfänger

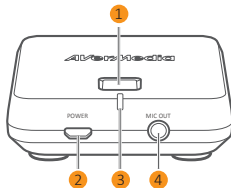


- 1 Ein-/Ausschalter
- 2 USB-Stromanschluss
- 3 Netz-LED
- 4 3,5-mm-Mik-Out-Anschluss



Zum Ein-/ausschalten drücken.
Zum Synchronisieren 3 Sek.
gedrückt halten.

 Installation

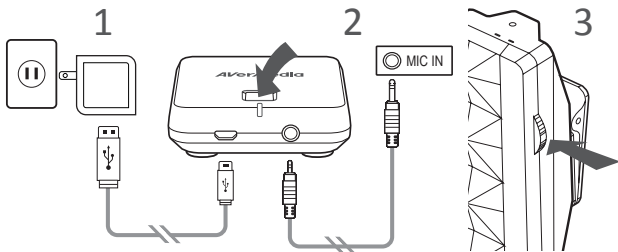


Hinweis: Zuerst die Lautstärke verringern, um bei erstmaliger Verwendung zu große Lautstärke zu vermeiden.

- 1 Empfänger mit einer Steckdose verbinden.
- 2 Empfänger mit dem Mik-Ausgang verbinden. Netztaaste drücken.
- 3 Mikrofon einschalten und benutzen.*

* Wenn beide Netz-LED weiter blinken, synchronisieren Sie das Mikrofon und den Empfänger durch gleichzeitiges Drücken beider Netztaaste während 3 Sek.; warten Sie bis beide LED stabil leuchten.

 Laden

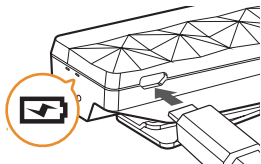

 Batterie-LED

Blinken: Akku schwach

 
Stabil: Laden

Aus: Vollständig aufgeladen

Hinweis: Laden Sie das Mikrofon vor der ersten Verwendung vollständig auf.

Anhängerform

- 1 Nehmen Sie den Clip ab.
- 2 Befestigen Sie das Umhängeband.
- 3 Legen Sie es um Ihren Hals.

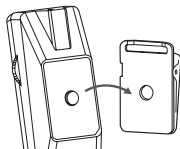


Clipform

- 1 Drehen Sie den Clip.
- 2 Klemmen Sie ihn an.



Contenu de la Boîte

 FR




Microphone




Récepteur



 Guide
Utilisateur



Adaptateur USB AC

 

Câble Alimentation
USB



Câble Audio
3.5mm vers 6.3mm

 


Sac de Transport



Cordon

Microphone

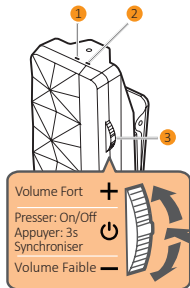


- 1 Batterie LED
- 2 Alimentation LED
- 3 Switch Multi Fonction
- 4 Tête de Micro (||O||)
- 5 Jack Alimentation USB
- 6 Trou Cordon
- 7 Clip

**Microphone / Récepteur
Alimentation LED**

Constant: On

Clignotant: Synchronisation

 Récepteur

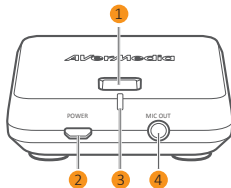


- 1 Bouton Alimentation
- 2 Jack Alimentation USB
- 3 Alimentation LED
- 4 Jack micro 3.5mm



Presser pour On/Off.
 Presser et Appuyer 3 sec pour
 synchroniser.

 Installation

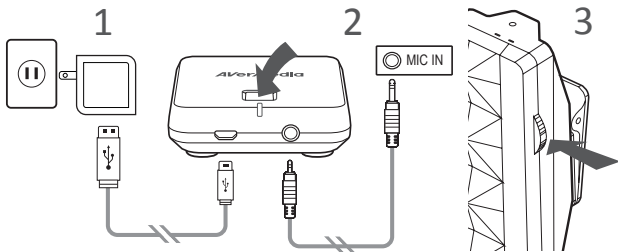


FR

Remarque: pour éviter un volume sonore excessif lors de votre premier test de son, veuillez diminuer le son sur votre système audio.

- 1 Connecter le récepteur à une source d'alimentation.
- 2 Connecter le récepteur à une entrée micro. Appuyer sur le bouton marche.
- 3 Allumer le micro et commencer l'utilisation.*

* Si les deux LEDs d'alimentation continuent à clignoter, re-synchroniser le microphone et le récepteur en appuyant sur les 2 boutons d'alimentation simultanément pendant 3 secondes, et attendre que les LEDs arrêtent de clignoter.

 Mise en Charge

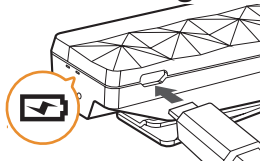

 Batterie LED

Clignote: Batterie Faible

Constant: En Charge

Eteint: Entièrement chargé


Remarque: Charger complètement votre microphone avant la première utilisation.

Pendentif

1 Enlever le clip.

2 Attacher le cordon

 3 Placer le autour du cou.

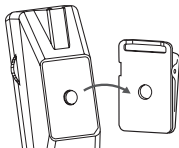


Clip

1 Tourner le clip.

2 Accrocher-le à la veste.



 All'interno della confezione




Microfono



Ricevitore



 Guida di
installazione rapida



Alimentatore di
corrente USB



Cavo di
alimentazione USB



Da 3.5 mm a 6.3
mm Cavo audio

 


Borsa di trasporto



Laccio da collo

Microfono

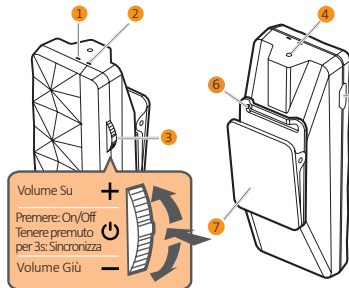


- ① LED batteria
- ② LED alimentazione
- ③ Interruttore multi-funzione
- ④ Ingresso audio
- ⑤ Porta di alimentazione USB
- ⑥ Foro del laccio da collo
- ⑦ Clip

**Microfono / Ricevitore
LED alimentazione**

Filso: On

**Lampeggiamento:
Sincronizzazione in corso**

 Ricevitore

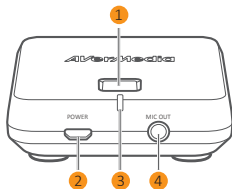


- ① Pulsante di alimentazione
- ② Porta di alimentazione USB
- ③ LED di alimentazione
- ④ Porta uscita microfono da 3.5 mm



Premere per Accednere / Speggnere.
Premere e tenere premuto 3
secondi per sincronizzare.

 Installazione

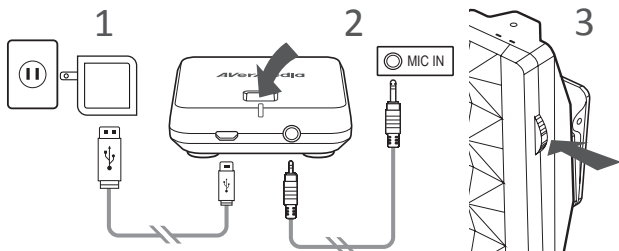


Nota: Per evitare un suono eccessivo al test audio iniziale, abbassare come prima cosa il volume dell'impianto audio.

- 1 Collegare il ricevitore a una presa di corrente.
- 2 Collegare il ricevitore a un ingresso microfonico. Premere il pulsante di alimentazione.
- 3 Attivare il microfono a iniziare a usarlo.*

* Qualora entrambi i LED di alimentazione continuino a lampeggiare, ri-sincronizzare il microfono e il ricevitore premendo contemporaneamente entrambi i pulsanti di alimentazione per 3 secondi e attendere fino a che il LED non diventa fisso.

 Caricamento in corso

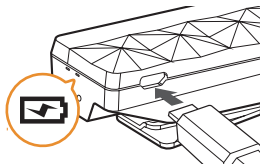

 LED batteria

Lampeggiamento: Batteria scarica

 
Fisso: Caricamento in corso

Spento: Completamente carica

Nota: Caricare completamente il microfono prima di iniziare a usarlo.

Modulo pendente

1 Togliere il clip.

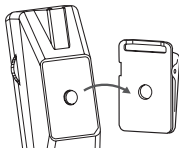

2 Fissare il laccio da collo.

 


3 Metterlo intorno al collo.



Modulo clip


1 Ruotare il clip.



2 Fissare il clip.



 En la caja



Micrófono

 


Receptor




Guía Rápida

ES



Adaptador USB

 

Cable USB



Cable Audio de
3.5mm a 6.3mm

 


Funda



Correa

Micrófono

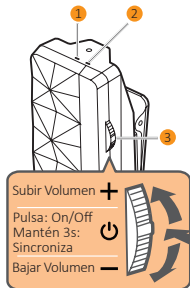


- 1 LED Batería
- 2 LED encendido
- 3 Botón multi función
- 4 Entrada de sonido (I/O)
- 5 Entrada USB
- 6 Soporte Correa
- 7 Clip

**Micrófono / Receptor
LED encendido**

Solido: ON

Parpadea: Sincronizando

 Receptor

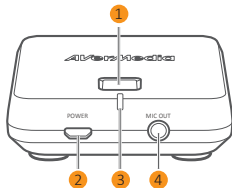


- 1 Botón Encendido
- 2 Conexión USB
- 3 LED encendido
- 4 Micrófono Jack 3.5 mm



Pulsa para On/Off.
Pulsa y mantén 3 seg para sincronizar.

 Instalación

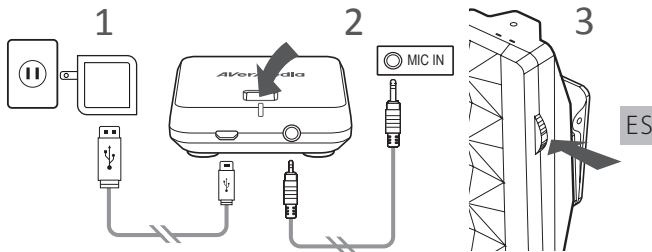


Nota: Para evitar ruido excesivo en el primer test, baje el sonido del sistema primero.

- 1 Conecte el receptor a la toma de corriente.
- 2 Conecte el receptor a una entrada mic. Pulse el botón de Encendido.
- 3 Encienda el micrófono y comience a usarlo.*

* Si el botón de encendido continua parpadeando, vuelva a sincronizar el micrófono y receptor al mismo tiempo durante 3 segundos y espere hasta que el LED deje de parpadear.

 Cargando

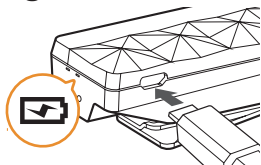

 LED Batería

Parpadea: Batería Baja

Solido: Cargando

Off: Totalmente cargada

 
Note: Cargue la batería de su micrófono antes de usarlo.

Adaptador Colgante

1 Quite el clip.

2 Ponga la correa

3 Póngase la correa.

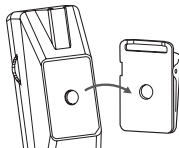


Adaptador Clip

1 Gire el clip.

2 Póngase el clip.



 Na caixa




Microfone




Recetor



 Guia de Instalação
Rápida



Adaptador de
Alimentação USB

 

Cabo de
alimentação USB



De 3,5 mm a 6,3
mm Cabo de áudio

 


Bolsa de transporte



Cordão

Microfone

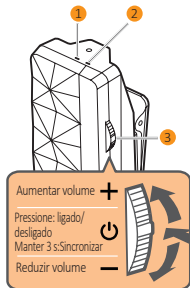


- 1 LED da bateria
- 2 LED de alimentação
- 3 Interruptor multifunção
- 4 Entrada de som (O)
- 5 Porta de Alimentação USB
- 6 Orifício do cordão
- 7 Clipe

Microfone / Recetor
LED de alimentação

Sólido: Ligar

A piscar: A sincronizar

 Recetor

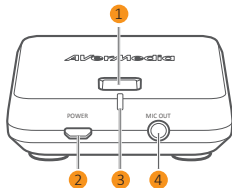


- 1 Botão de alimentação
- 2 Porta de Alimentação USB
- 3 LED de alimentação
- 4 Porta de saída do microfone de 3,5 mm



Pressionar para ligar/desligar.
Pressionar e manter 3 segundos
para sincronizar.

 Instalação

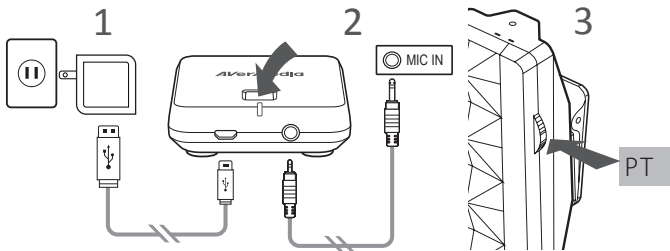


Obs.: Para evitar som excessivo no teste de som, reduzir primeiro o seu sistema de áudio.

- 1 Ligar o recetor a uma tomada de corrente.
- 2 Ligar o recetor a uma entrada de microfone. Pressione o botão de Power (alimentação).
- 3 Ligar o microfone e começar a usar.*

* Se ambos os LED de alimentação continuar a piscar, sincronizar novamente o microfone e o recetor pressionando ambos os botões de alimentação simultaneamente durante 3 segundos e aguardar até que os LED fique fixos.

 Carregamento

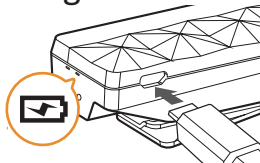

 LED da bateria

A piscar: Bateria fraca

Fixo: Carregamento

Desligado Totalmente carregada

 
Obs.: Carregue totalmente o seu microfone antes da primeira utilização.

Forma pendente

1 Retirar o clipe.


2 Prender o cordão.

3 Coloque-o à volta do pescoço.

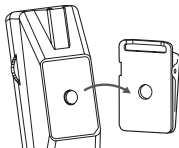

Forma do clipe

 
1 Rode o clipe.



2 Fixe-o.



 Doboz tartalma




Mikrofon




Vevőegység



 Útmutató



USB AC Adapter

 

USB kábel



3,5mm > 6,3mm
audió átalakító
kábel

 
 


Hordtáska



Nyakpánt

Mikrofon

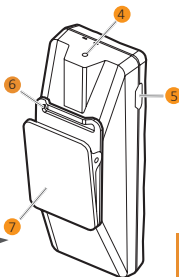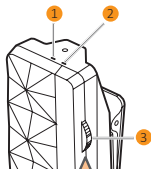

- 1 Akku LED
- 2 Üzemi LED
- 3 Multifunkciós kapcsoló
- 4 Hang bemenet (I/O)
- 5 USB töltő aljzat
- 6 Nyakpánt lyuk
- 7 Csipesz

Hangerő Fel +

Nyomva: Be/Ki
Nyomva 3mp:
szinkronizáció

Hangerő Le -

 


**Mikrofon / Vevőegység
Üzemi LED**

Világít: Bekapcsolva

Villog: Szinkronizálás

Vevőegység

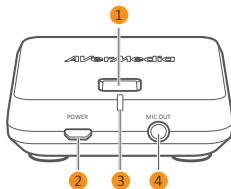


- 1 Bekapcsoló gomb
- 2 USB töltő aljzat
- 3 Üzemi LED
- 4 3,5mm mik. kimenet



Nyomja meg a BE/KI kapcsoláshoz.
Tartsa nyomva 3mp-ig a
szinkronizációhoz.

 Beüzemelés

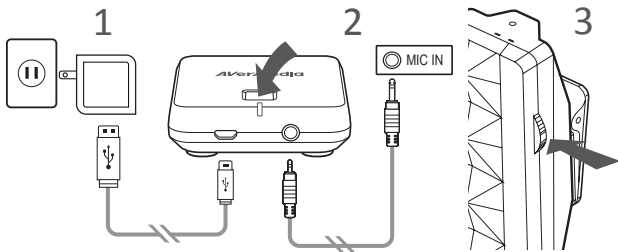


HU

Megjegyzés: Az első beüzemeléskor előforduló zavaró hanghatások elkerülése érdekében, előbb csökkentse a rendszerének hangerejét.

- 1 Csatlakoztassa a vevőegységet a hálózati adapterhez.
- 2 Csatlakoztassa a vevőegységet egy mikrofon bemenethez. Nyomja meg a bekapcsoló gombot.
- 3 Kapcsolja be a mikrofont és elkezdheti a használatot.*

* Ha az Üzemi LEDek villognak, szinkronizálja újra a mikrofont és vevőegységet, mindkettő bekapcsoló gombjának 3mp-es nyomva tartásával addig, amíg a LEDek folyamatosan világítanak.

 Töltés

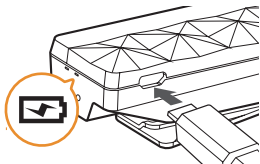

 Akku LED

Villog: Alacsony töltöttség

 
Világít: Töltés

Nem világít: Feltöltve

Megjegyzés: Töltse fel teljesen a mikrofont az első használat előtt.

Függesztés

1 Távolítsa el a csipeszt.

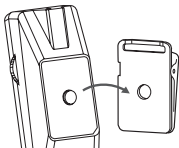

2 Csatlakoztassa a nyakpántot.



3 Akassza a nyakába.



Csiptetés

 
1 Forgassa el a csipeszt.



2 Csíptesse fel.



W zestawie




Mikrofon




Słuchawka



 Przewodnik
instalacji



Ładowarka USB

 

Kabel zasilania USB



3.5 mm to 6.3 mm
Kabel Audio

 


Torba przenośna



Pasek nośny

Mikrofon

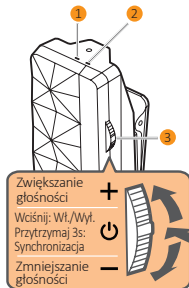


- 1 Dioda LED baterii
- 2 Dioda (LED) zasilania
- 3 Przycisk wielofunkcyjny
- 4 Otwór mikrofonu (ⓘ)
- 5 Gniazdo ładowania USB
- 6 Otwór paska nośnego
- 7 Klips

Mikrofon / Słuchawka
Dioda (LED) zasilania

Stały: Wł.

Błyska: Synchronizuje

 Słuchawka

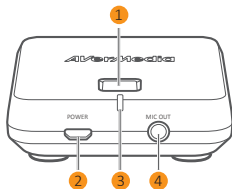


- 1 Przycisk zasilania
- 2 Gniazdo ładowania USB
- 3 Dioda (LED) zasilania
- 4 3Gniazdo mikrofonu 3,5 mm



Wciśnij, aby wł./wył.
Wciśnij i przytrzymaj 3 sek, aby
synchronizować.

 Instalacja

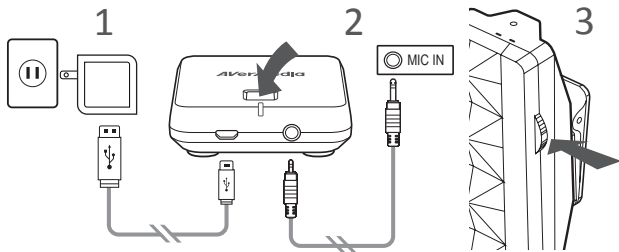


Uwaga: Aby uniknąć nadmiernego poziomu dźwięku przy teście wstępnym, najpierw zmniejsz głośność.

- 1 Podłącz słuchawkę do wyjścia zasilania.
- 2 Podłącz słuchawkę do wejścia mikrofonu. Wciśnij przycisk zasilania.
- 3 Włącz mikrofon i korzystaj.*

* Jeśli obie diody (LED) błyskają, należy ponownie zsynchronizować mikrofon i słuchawkę wciskając i przytrzymując przez 3 sek. Przyciski zasilania, aż diody LED zaczną świecić stałym światłem.

 Ładowanie

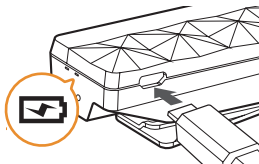

 Dioda (LED) baterii

Błyska: Słaba bateria

 
Świeci stale: Ładowanie

Wył: W pełni naładowana

Uwaga: Przed pierwszym użyciem naładuj do pełna swój mikrofon.

Forma zawieszenia

1 Usuń klips.

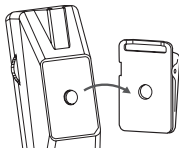

2 Podłącz pasek nośny.

 


3 Załóż na szyję.



Klips


1 Obróć klips.



2 Zatrzaśnij.



 V boxu




Mikrofon




Přijímač



 Průvodce rychlou
instalací



Napájecí adaptér
USB

 

Napájecí kabel USB



3,5 mm až 6,3 mm
Audio kabel

 


Přenosná taška



Popruh

Mikrofon

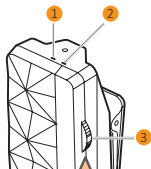


Zvýšení hlasitosti +

Stiskněte Zap./Vyp.
Přidrže 3s:
Synchronizovat



 Snížení hlasitosti -

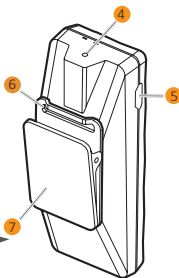


- 1 LED baterie
- 2 Napájecí baterie
- 3 Multifunkční spínač
- 4 Vstup zvuku (I/O)
- 5 Napájecí port USB
- 6 Otvor na popruh
- 7 Spona

**Mikrofon / Přijímač
Napájecí baterie**

Rozsvícená: Zap.

Blikající: Synchronizace

 Přijímač

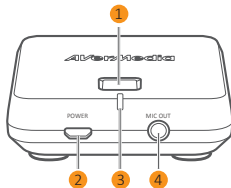


- 1 Tlačítko napájení
- 2 Napájecí port USB
- 3 LED napájení
- 4 3,5 mm výst. port mik.



Stisknutím Zapněte/Vypněte

Stiskněte a 3 s přidrže, synchronizujte.

 Instalace

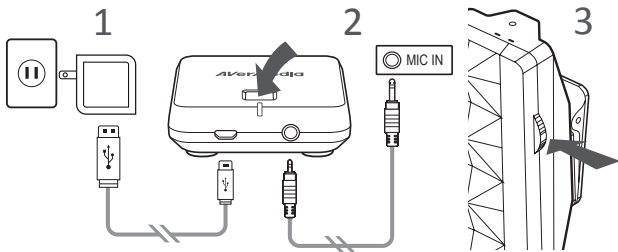


Poznámka: Chcete-li se vyhnout nadměrné hlasitosti při původním testu, nejprve snižte hlasitost audio systému.

CS

- 1 Přijímač zapojte do zástrčky.
- 2 Přijímač zapojte do vstupu mikrofonu. Stiskněte tlačítko napájení.
- 3 Zapněte mikrofon a začněte používat. *

* Pokud obě LED i nadále blikají, mikrofon a přijímač znovu synchronizujte stisknutím obou tlačítek po dobu 3 sekund a počkejte, dokud se LED nerozsvítí.

 Nabíjení

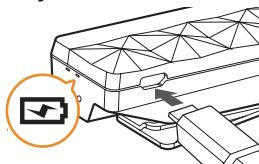

 LED baterie

Blikající: Slabá baterie

Svítlí: Nabíjí se

Vyp.: Nabitá

 
Poznámka: Před prvním použitím mikrofon nabijte.

Spona

1 Sejměte sponu.

2 Připevněte popruh.

3 Umístěte kolem krku.

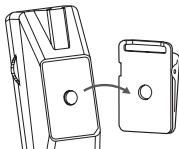


Spona

1 Sponu otočte.

2 Sponu připevněte.



 В коробке




Микрофон




Ресивер



 Краткое
руководство



 USB адаптер
питания сети
переменного тока



USB кабель
питания



Аудио кабель с
3,5мм на 6,3мм



 
 
 
Сумочка для
переноски



Ремешок на шею

RU

Микрофон

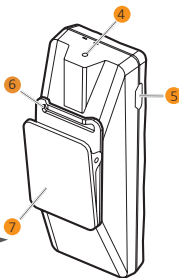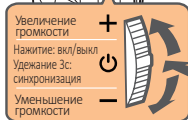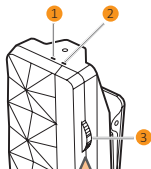


- 1 Светодиодный индикатор батареи
- 2 Светодиодный индикатор питания
- 3 Многофункциональный переключатель
- 4 Отверстие микрофона (I/O)
- 5 Разъем USB питания
- 6 Крепление для ремешка
- 7 Клипса

Микрофон / Ресивер
Светодиодный индикатор питания

Светится: вкл

Мигает: синхронизируется

 Ресивер

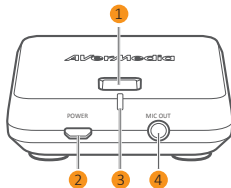


- 1 Кнопка питания
- 2 Разъем USB питания
- 3 Светодиодный индикатор питания
- 4 3,5 мм выход микрофона



Нажать для вкл/выкл
Нажать и удерживать 3 с для синхронизации.

 Подключение

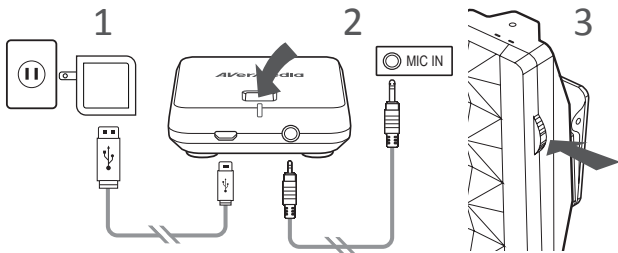


Примечание: Во избежание очень громкого звука при тестировании, вначале уменьшите громкость вашей аудио системы.

- 1 Подсоедините ресивер к сети электропитания.
- 2 Подсоедините ресивер к микрофонному входу. Нажмите кнопку питания.
- 3 Включите микрофон и начните использование.*

* Если оба светодиодных индикатора питания продолжают мигать, повторите синхронизацию микрофона и ресивера, нажав одновременно на 3 с кнопки питания и дождитесь прекращения мигания светодиодного индикатора.

RU

 Зарядка

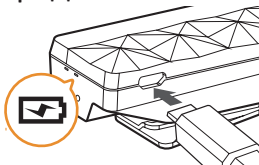

Светодиодный индикатор
батареи

Мигает: низкий заряд батареи

 
Светится: заряжается

Выкл: полностью заряжен

Примечание: полностью зарядите
микрофон, перед первым использованием.

Крепление кулона

- 1 Удалите клипсу. 2 Прикрепите ремешок. 3 Повесьте себе на шею.

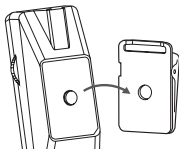


Крепление клипсы

- 1 Поверните клипсу. 2 Прикрепите к одежде.



 Kutu içeriđi




Mikrofon



Alıcı



 Hızlı Kullanım
Klavuzu



USB AC Adaptör



USB Güç Kablosu



3.5mm'den
6.3mm'ye Ses
Kablosu

 


Taşıma çantası



Askı ipi

Mikrofon

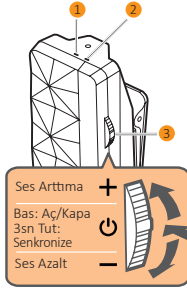


- 1 Pil LED'i
- 2 Güç LED'i
- 3 Çok Fonksiyonlu switch
- 4 Ses Girişi (I/O)
- 5 USB Güç girişi
- 6 Askı ipi deliği
- 7 Klips (mandal)

Mikrofon / Alıcı
Güç LED'i

Aralıksız: Açık

Flaşlı: Senkronizasyon

 
Alıcı

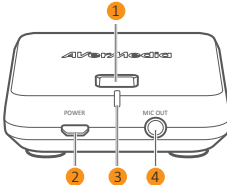

- 1 Güç Butonu
- 2 USB Güç girişi
- 3 Güç LED'i
- 4 3.5 mm mikrofon çıkışı jeki

Aç/Kapa için bas.
Senkronizasyon için 3sn Bas ve Tut.

 Kurulum

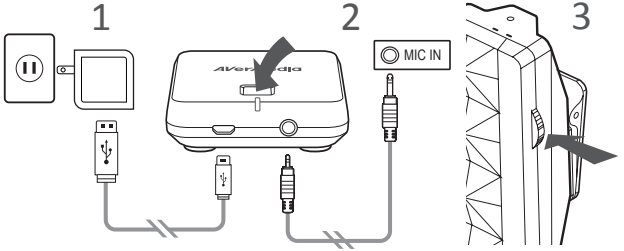


Not: Başlangıç testinde aşırı sesi önlemek için ilk önce ses sisteminizi kısın.

- 1 Alıcıyı bir güç çıkışına bağlayın
- 2 Alıcıyı bir mikrofon girişine bağlayın. Güç butonuna basın.
- 3 Mikrofonu açın ve kullanmaya başlayın.*

* Eğer her iki Güç LED'i flaş yapmaya devam ederse, mikrofon ve alıcıyı, her ikisinin güç düğmesine eş zamanlı olarak 3sn basıp, LEDler aralıksız yanmaya başlayana kadar senkronize edin.

 Şarj etme

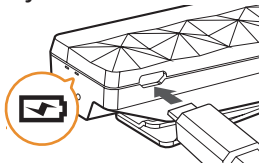

 PİL LED'i

Flaşlama: Düşük PİL

 
Aralıksız: Şarj Oluyor

Kapalı: Tam Şarjlı

Not: Mikrofonunuzu ilk kullanımdan önce tam şarj ediniz.

Askı Formu

1 Klipsi Çıkart.

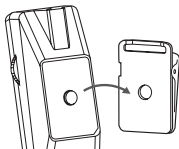

2 Askı ipini tak.



3 Boynunuza asın.



Klipsleme (Mandallama) Formu

1 Klipsi çevir.



2 Üzerine tuttur.



내용물



 
마이크



수신기



빠른 설치 가이드



USB 전원 어댑터



USB 전원 케이블



3.5mm - 6.3mm
오디오 케이블

 


전용 백



목줄

마이크

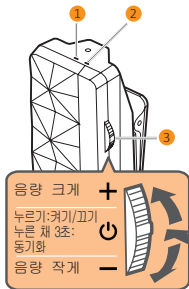


- ① 배터리 LED
- ② 전원 LED
- ③ 다기능 스위치
- ④ 사운드 입력 (IO)
- ⑤ USB 전원 포트
- ⑥ 목줄 구멍
- ⑦ 클립

마이크 / 수신기
전원 LED

LED 켜짐: 전원 켜짐

LED 점멸: 동기화

 
수신기

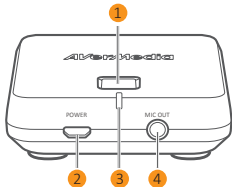

- ① 전원 버튼
- ② USB 전원 포트
- ③ 전원 LED
- ④ 3.5mm 마이크 포트

누르면 전원이 켜짐/꺼짐.
3초간 누르고 있으면 동기화.

 설치

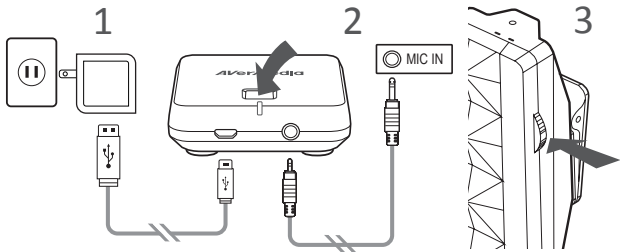


참고: 첫 사운드 테스트에서 음량이 지나치게 크지 않도록 하려면 먼저 오디오 시스템 음량을 낮추도록 하십시오.

- 1 수신기를 전원 소켓에 연결합니다.
- 2 수신기를 마이크 입력부에 연결합니다. 전원 버튼을 누릅니다.
- 3 마이크를 켜고 사용하기 시작합니다.*

KO

* 양쪽 전원 LED가 계속 점멸하는(깜박이는) 경우, 양쪽 전원 버튼을 동시에 3초간 누르고 LED 깜박임을 멈출 때까지 기다려 마이크와 수신기를 동기화합니다.

 충전

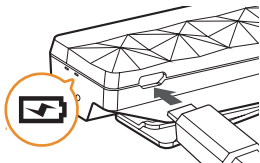

배터리 LED

점멸: 남은 배터리량 적음

 
LED 켜짐: 충전 중

LED 꺼짐: 충전 완료

참고: 처음 사용하기 전에 먼저 마이크를 완전히 충전하도록 하십시오.

펜던트 형식

1 클립을 회전시킵니다. 2 목줄을 연결합니다. 3 목에 겁니다.

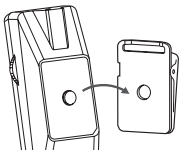

클립 형식

1 클립을 회전시킵니다.



2 클립을 사용해 착용합니다.





European Community Compliance Statement

Class B

This product is herewith confirmed to comply with the requirements set out in the Council Directives on the approximation of the laws of the Member States relating to R&TTE Directive 1999/5/EC, Low Voltage Directive (LVD) 2014/35/EU.



TR Customs Union Certificate

EMC Directive : TR CU 020/2011



Waste Electrical and Electronic Equipment

The mark of crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.

www.avermedia.com



Model No.: AW310
P/N: 300AAW310D7G
Made in Taiwan