 


# AVerMedia

## Video Converter

Component to HDMI

ET113



English

Deutsch

Français

Italiano

Español

Português

Magyar

Polski

Canadienne-Française

Česky

Русский

Română

 
繁體中文

简体中文

한국어

# Quick Guide


## Overview

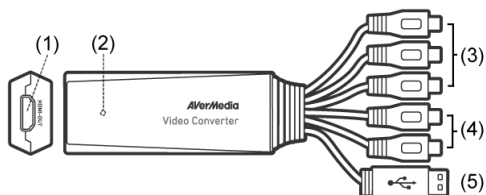


|                           |                        |
|---------------------------|------------------------|
| (1) HDMI-OUT              | (4) Stereo Audio Jacks |
| (2) Power Indicator       | (5) USB DC Power Plug  |
| (3) Component Video Jacks |                        |

## Installation

 1. Connect your video and audio outputs to (3) and (4).

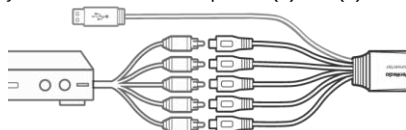

 2. Connect (5) to a USB port for power or use a USB power adapter.




3. Use an HDMI cable (not included) to connect (1) and your TV.



### Resolutions

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz


## Übersicht

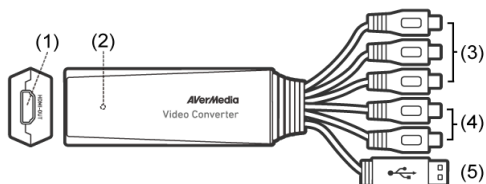


|                                |                                         |
|--------------------------------|-----------------------------------------|
| (1) HDMI-Ausgang               | (4) Stereoaudioanschlüsse               |
| (2) Betriebsanzeige            | (5) USB-Netzstecker<br>(Gleichspannung) |
| (3) Component-Video-Anschlüsse |                                         |

## Installation

 
1. Verbinden Sie Ihre Video- und Audioausgänge mit (3) und (4).



 2. Verbinden Sie (5) zur Stromversorgung mit einem USB-Port oder nutzen Sie ein USB-Netzteil.



 
3. Verbinden Sie über ein HDMI-Kabel (nicht mitgeliefert) (1) und Ihren Fernseher.



### Auflösungen

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

 
## Aperçu général

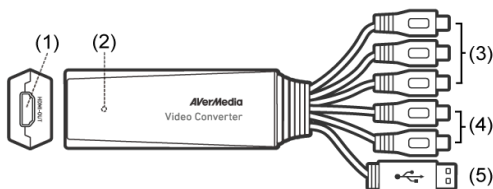


|                             |                        |
|-----------------------------|------------------------|
| (1) HDMI-OUT                | (4) Jacks Stéréo Audio |
| (2) Indicateur Alimentation | (5) Prise Secteur USB  |
| (3) Jacks Vidéo Composante  |                        |

## Effectuer les Branchements

 
1. Branchez vos sorties audio et vidéo à (3) et (4).

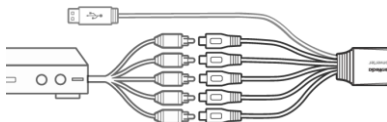

 2. Branchez (5) à un port USB pour l'alimentation ou utilisez un adaptateur secteur USB.



 
3. Utilisez un câble HDMI (non fourni) pour relier (1) à votre TV.



### Résolutions

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

 
## Panoramica

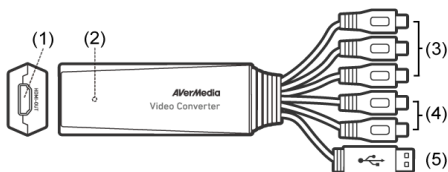


|                                   |                                     |
|-----------------------------------|-------------------------------------|
| (1) Uscita HDMI                   | (4) Connettori audio stereo         |
| (2) Indicatore di alimentazione   | (5) Connettore alimentazione DC USB |
| (3) Connettori video a componenti |                                     |

## Installazione

 1. Collegare le uscite video e audio a (3) and (4).



 2. Collegare (5) ad una porta USB per l'alimentazione, oppure utilizzare un adattatore di corrente USB.




3. Utilizzare un cavo HDMI (non incluso) per collegare (1) ed il televisore.



### Risoluzioni

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz


## Información general

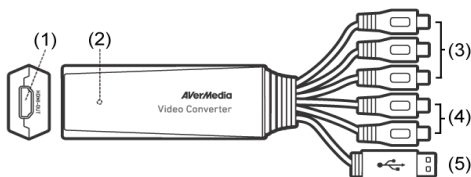


|                                    |                                     |
|------------------------------------|-------------------------------------|
| (1) SALIDA HDMI                    | (4) Conectores de audio estéreo     |
| (2) Indicador de alimentación      | (5) Conector de alimentación CC USB |
| (3) Conectores de vídeo componente |                                     |

## Instalación

 
1. Conecte las salidas de video y audio a (3) y (4)



 2. Conecte (5) a un puerto USB para alimentar o use un cargador USB



 
3. Use un cable HDMI (no incluido) para conectar (1) a la TV



### Resoluciones

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

 
## Visão Geral

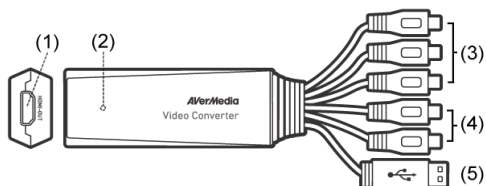


|                                 |                                 |
|---------------------------------|---------------------------------|
| (1) SAÍDA HDMI                  | (4) Tomadas de áudio estéreo    |
| (2) Indicador de Energia        | (5) Ficha de alimentação DC USB |
| (3) Tomadas de vídeo componente |                                 |

## Instalação

 
1. Ligue as saídas de vídeo e áudio a (3) e (4).



 2. Ligue (5) a uma porta USB para fornecer energia ou a um transformador USB.



 
3. Utilize um cabo HDMI (não incluído) para ligar (1) à sua TV.



### Resoluções

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

 
## Áttekintés

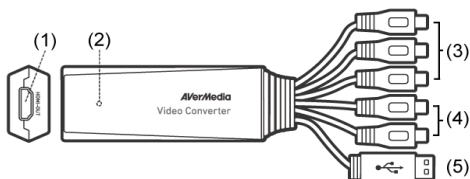


|                                |                                   |
|--------------------------------|-----------------------------------|
| (1) HDMI-Ki                    | (4) Sztereó Audió Jack dugók      |
| (2) Feszültség jelző           | (5) USB DC elektromos csatlakozás |
| (3) Komponens Videó Jack dugók |                                   |

## Telepítés

 1. Csatlakoztassa a videó és audió kimeneteket a (3) és (4) kábelekhez.



 2. Csatlakoztassa az (5) kábelt egy USB aljzatba energiaforrásért, vagy használjon USB elektromos adaptert.



3. Használjon egy HDMI kábelt (nem tartozék) az (1) kábel és TV összekötéséhez.




### Felbontások

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz



Model No.: ET113  
P/N: 300AET113D6K  
Made in Taiwan


## Przegląd

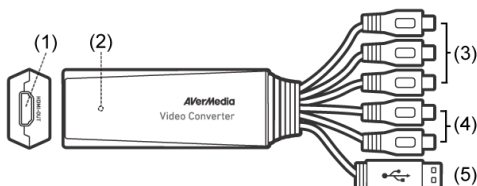


|                           |                              |
|---------------------------|------------------------------|
| (1) Wyjście HDMI          | (4) Stereo Jacki Audio       |
| (2) Wskaźnik zasilania    | (5) Wtyczka zasilania USB DC |
| (3) Jack video komponentu |                              |

## Instalacja

 1. Podłącz wyjścia wideo i audio do (3) oraz (4).

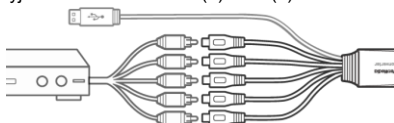

 2. Podłącz (5) do portu USB w celu poboru mocy lub skorzystaj z zasilacza na USB.




3. Użyj kabla HDMI (nie dołączony do zestawu) i podłącz (1) z TV.



### Rozdzielczości

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz


## Aperçu général

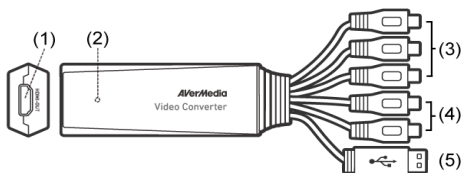


|                               |                                   |
|-------------------------------|-----------------------------------|
| (1) Sortie HDMI               | (4) Prises audio stéréo           |
| (2) Indicateur d'alimentation | (5) Prise d'alimentation c.c. USB |
| (3) Prises composite vidéo    |                                   |

## Installation

 
1. Brancher vos sorties vidéo et audio à (3) et (4).

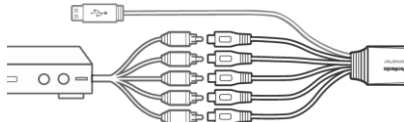

 2. Brancher (5) au port USB pour l'alimentation ou utiliser un adaptateur USB.



 
3. Utiliser un câble HDMI (non inclus) pour brancher (1) et votre TV.



### Résolutions

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

 
## Přehled

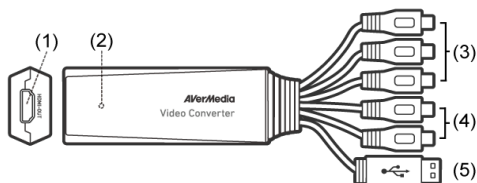


|                                |                            |
|--------------------------------|----------------------------|
| (1) HDMI-VÝSTUP                | (4) Stereo audio konektory |
| (2) Kontrolka napájení         | (5) USB DC napájení        |
| (3) Konektory komponentu Video |                            |

## Instalace

 1. Připojte výstupy z audia a videa k (3) a (4).



 2. Připojte (5) k USB portu s napájením nebo použijte elektrický USB adaptér.




3. Použijte HDMI kabel (není součástí balení) k propojení (1) a vaší TV.



### Rozlišení

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz


## Обзор

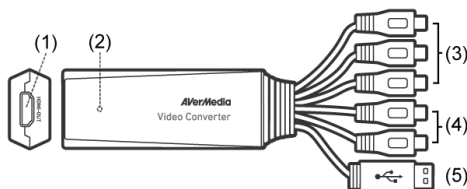


|                        |                    |
|------------------------|--------------------|
| (1) Выход HDMI         | (4) Стерео аудио   |
| (2) Индикатор питания  | (5) USB DC питание |
| (3) Компонентный видео |                    |

## Подключение

 1. Подключите источник сигнала к разъемам (3) и (4).



 2. Подключите (5) к порту USB или адаптеру питания USB для питания устройства.




3. Подключите (1) к ТВ с помощью кабеля HDMI (не входит в комплект поставки).



### Видеоразрешения

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz, 1080i/p 50/60 Hz


## Prezentare generală

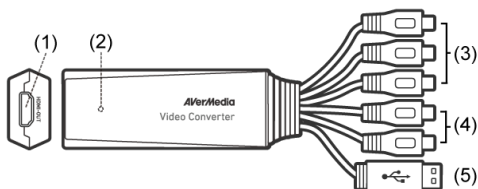


|                           |                               |
|---------------------------|-------------------------------|
| (1) IEȘIRE HDMI           | (4) Mufe audio stereo         |
| (2) Indicator alimentare  | (5) Fișă de alimentare CC USB |
| (3) Mufe video componentă |                               |

## Instalare

 1. Conectați ieșirile video și audio la (3) și (4).



 2. Conectați (5) la un port USB pentru alimentare sau folosiți alimentatorul USB.




3. Folosiți un cablu HDMI (nu este inclus) pentru a conecta (1) și televizorul.



### Rezoluții

 480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz


## 概述

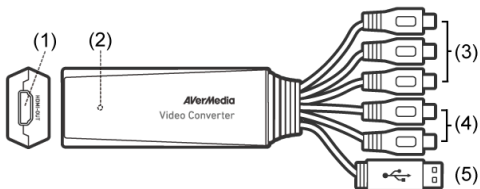


|                     |              |
|---------------------|--------------|
| (1) HDMI 輸出         | (4) 立體音源接孔   |
| (2) 電源指示燈           | (5) USB 電源接頭 |
| (3) 色差 (YPbPr) 視頻接孔 |              |

## 安裝步驟

 
1. 請將您的 AV 視頻和音源輸出連接 (3) 和 (4)。

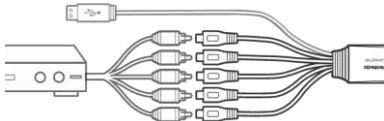

 2. 將 (5) 連接到 USB 電源接口或使用 USB 電源轉接器。



 
3. 將 HDMI 線 (不內附) 連接 (1) 跟您的電視。



## 支援解析度

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

 
## 概述

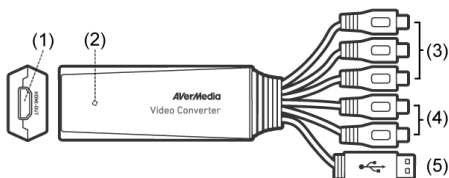


|                     |              |
|---------------------|--------------|
| (1) HDMI 输出         | (4) 立体音源接孔   |
| (2) 电源指示灯           | (5) USB 电源接头 |
| (3) 色差 (YPbPr) 视频接孔 |              |

## 安装步骤

 
1. 请将您的 AV 视频和音源输出连接 (3) 和 (4)。

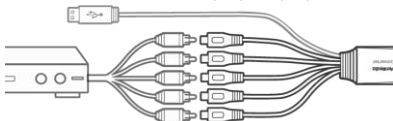

 2. 将 (5) 连接到 USB 电源接口或使用 USB 电源转接器。



 3. 将 HDMI 线 (不内附) 连接 (1) 跟您的电视。




### 支持分辨率

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz

简体中文

 
## 개요

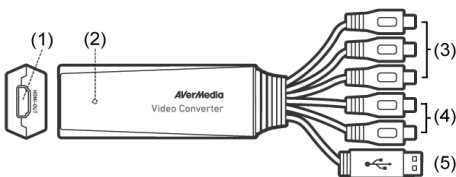


|                |                   |
|----------------|-------------------|
| (1) HDMI 출력    | (4) 스테레오 오디오 잭    |
| (2) 전원 표시등     | (5) USB DC 전원 플러그 |
| (3) 컴포넌트 비디오 잭 |                   |

## 설치

 
1. 비디오 & 오디오 출력부를 (3)과 (4)에 연결합니다.



 2. (5)를 USB 포트에 연결해 전원을 공급하거나 USB 전원 어댑터를 사용합니다.



 3. HDMI 케이블(별도 판매)을 사용해 (1)을 TV에 연결합니다.



### 해상도

480i/p 60 Hz, 576i/p 50 Hz, 720p 50/60 Hz,  
1080i/p 50/60 Hz







## Disclaimer

All the screen shots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

## Copyright

©2014 by AVerMedia Technologies, Inc. All rights reserved. No part of this publication, in whole or in part, may be reproduced, transmitted, transcribed, altered or translated into any language in any form by any means without the written permission of AVerMedia Technologies, Inc. Information and specification contained in this manual are subject to change without notice and do not represent a commitment on the part of AVerMedia.

For more information, please refer to [www.avermedia.com](http://www.avermedia.com).

"AVerMedia" is trademark or registered trademark of AVerMedia Technologies, Inc.

The pictures contained in this manual are provided for reference purposes only.

Made in Taiwan (Expect Accessories).

## 公司聲明及版權

©2014 圓剛科技版權所有，轉載必究。

本使用手冊內容受到著作權之保護並歸屬於本公司所有。非經本公司書面同意，不得以任何方式將本手冊之全部或一部進行重製、傳輸、抄寫、轉譯或翻譯成其他語言，或以任何型態呈現其內容。本公司保留變更或改善產品的權利，恕不另行通知。

歡迎至官網 [www.avermedia.com](http://www.avermedia.com) 取得本產品相關最新資訊。

AVerMedia 為圓剛科技股份有限公司所擁有的商標或註冊商標。

手冊所述產品及配件之示意圖僅供參考，實際外觀以產品出貨為準。

## 公司声明及版权

©2014 圆刚科技版权所有，转载必究。

本使用手册内容受到著作权之保护并归属于本公司所有。非经本公司书面同意，不得以任何方式将本手册之全部或一部进行重制、传输、抄写、转译或翻译成其他语言，或以任何型態呈现其内容。本公司保留变更或改善产品的权利，恕不另行通知。

欢迎至官网 [www.avermedia.com.cn](http://www.avermedia.com.cn) 或 [solutions.avermedia.com/zh-cn](http://solutions.avermedia.com/zh-cn) 取得本产品相关最新信息。

AVerMedia 为圆刚科技股份有限公司所拥有的商标或注册商标。

手册所述产品及配件之示意图仅供参考，实际外观以产品出货为准。

## Headquarters

Address No.135, Jian 1st Rd., Zhonghe Dist., New Taipei City 23585, Taiwan

Website [www.avermedia.com](http://www.avermedia.com)

Telephone +886-2-2226-3630

## 國際總部

地址 23585 新北市中和區建一路 135 號

網址 [www.avermedia.com](http://www.avermedia.com)

電話 +886-2-2226-3630

## 中國子公司

地址 上海市静安区武宁南路 488 号智慧广场 1510 室

网址 [www.avermedia.com.cn](http://www.avermedia.com.cn)

电话 +86-21-5298-7985

v1.0

09/2014



## Important Safety Instructions

- 1.) Read these instructions.
- 2.) Keep these instructions.
- 3.) Pay attention to all warnings.
- 4.) Follow all instructions.
- 5.) Do not use this apparatus near water.
- 6.) Clean only with dry cloth.
- 7.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11.) Only use the attachments/accessories specified by the manufacturer.
- 12.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14.) Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use with caution when moving the cart/apparatus combination to avoid injury from tip-over.



## 重要安全說明

- 仔細閱讀這些說明。
- 妥善保存這些說明。
- 遵守所有的指示。
- 注意所有的警告。
- 請勿將本產品安裝於不平穩的表面。
- 請勿在潮濕或靠近水的地方使用本產品。
- 清潔前請拔除電源。僅使用乾布清潔。
- 請於通風的環境使用本產品。請勿堵住通風口。
- 請於規格溫度範圍內使用本產品。
- 請使用額定電壓範圍內的電源。
- 請勿放置重物於本產品上。
- 請勿安裝於熱源附近如暖器或火爐旁。
- 請勿破壞極性或接地插頭的安全防護設計。
- 請保護電源線，物使其被踩踏或碾壓，特別是與插頭或變壓器的連接處。
- 僅使用製造商指定的配件及零件。
- 打雷或長時間不使用時請拔除電源。
- 請勿以任何方式改造或拆解本產品。
- 如需維修請洽合格維修人員。
- 請勿當作家庭垃圾任意丟棄。請遵從當地環境法規妥善處理。

## Limited Warranty

AVerMedia warrants that the Product is free from defects in material and/or workmanship under normal use.

AVerMedia does not warrant that the operation of the Product will be uninterrupted or error-free. The Limited Warranty does not cover:

- The warranty period has expired;
- Product that has (a) serial numbers or the warranty sticker that have been removed tampered, damaged or altered, or (b) nonconforming.
- Product purchased from an unauthorized distributor;
- Product has been tested, altered, modified, repaired or serviced by someone other than AVerMedia (or its authorized service centers);
- Failure to adhere to user's manual.
- Product that are operated in combination with third party's software which may be obtained by user or provided by AVerMedia in the product packaging.
- Product that are operated in combination with third party's device(s)/equipment(s), or the damage is caused from computer viruses
- damage caused by (a) misuse, abuse, neglect, improper use of the physical or operating environment (such as the exterior ruptures, moisture, exposure to temperature, high or low humidity, power overload, placement subject to extreme environments that include a lack of ventilation or stacking, throwing, soakage, etc.) or modification; (b) improper or unauthorized installation, wiring, repair, testing or (c) use of the Product outside AVerMedia published guidelines (d) accident, fire, acts of God or force majeure such as natural disasters, environmental distress, or lightning; power surges; (e) improper maintenance or failure to use the information content in accordance with the Product.
- Other than the above, similar circumstances not attributable to AVerMedia.

## Warranty Period

The term of the warranty begins from the date of purchase. Your dated sales receipt showing the date of purchase is the proof of purchase. The warranty period varies by product and is generally 1 or 2 years; consult your original AVerMedia product packaging or user information provided by AVerMedia and local in-country distributor at the time of purchase for the warranty term specific to your product ("Warranty Period").

## How to Obtain Warranty Service – Contact your local in-country distributor

- To obtain warranty service, an original or copy of the sales receipt from the original retailer is required.
- A separate warranty may be provided by international distributors. This warranty is provided by the local in-country distributor and this distributor provides local service for your device. Distributor warranties are only valid in the area of intended distribution.

- When a Product or part is replaced, the replacement item becomes your property and the returned product or part becomes the property of AVerMedia or its distributor.

## **Usage of Personal Contact Information**

If you obtain service under this warranty, you agree to and fully authorize AVerMedia or its distributor to store, use, and handle information related to the warranty service, as well as your personal contact information, including but not limited to your name, phone number, address, and email. AVerMedia or its distributor requires this information to perform the necessary service set forth by this warranty. For warranty service and outcome satisfaction, AVerMedia reserves the right to contact you in order to understand the problems that occur during usage of the product; the company may also notify you about any product recalls or safety issues. To achieve satisfactory results, you agree to fully license AVerMedia to transfer his/her customer information to the country or region of the original purchase. This allows AVerMedia to undertake the scope of product or parts maintenance of the warranty service. AVerMedia may also disclose this information under certain legal requirements.

## **How to provide Warranty Service**

Services may vary by geographic region, please contact AVerMedia or its distributor for a response regarding the appropriate services for your Product. The Warranty Service may be provided by the following types.

### **a. Customer Delivery Service**

According to "Customer Delivery Service," the customer must pay for their own product to be delivered to a designated service center for repair or replacement, and all risks are borne by the customer. The customer may retrieve the product after the repair or replacement process has been completed. Should the customer fail to collect the product, the company will handle the product as it sees fit without incurring any liability.

### **b. Mail-In Service**

According to "Mail-In Service," customers will be required to pay for their own products to be mailed to a designated service center for repair or replacement, and all the risks are borne by the customer. After the product has been repaired or replaced, AVerMedia will send the product back to the customer at their own expense and bear all risks, except where otherwise specified by service dealers.

### **c. Customers' Two-Way Mail Service**

According to "Customers' Two-Way Mail Service," customers will be required to pay for their own product to be delivered to a designated service center for repair or replacement, and all the risks are borne by the customer. After the product has been repaired or replaced, the product will be returned to the customer, for which all delivery and other risks are borne by the customer. If the customer fails to arrange for the return transport of the product, the company will handle the

product as it sees fit without incurring any liability.

#### **No On-Site Service**

AVerMedia and its distributor do not provide on-site service, including but not limited to, installation, maintenance, instructing, troubleshooting problems, the usage of the product or the warranty service. In the event that calling, updating software, or other means fail to resolve the issue, AVerMedia and its distributor will arrange warranty service as specified under "Scope of Warranty Services (a)."

#### **Limitation of Liability**

AVerMedia accepts responsibility for the damage or loss of products only under the following circumstances: when the company has a product in store or when a product is being transported by the company.

If any information contained in the product (including confidential information, proprietary information, or personal information) is missing or revealed, AVerMedia or its service dealers are without responsibility.

Under any circumstances, if the solutions proposed under the warranty have not fulfilled its basic purpose, AVerMedia, its subsidiaries, suppliers, and dealers do not assume any burden of liability:

(a) loss, damage, or disclosure of client data; (b) special damages, incidental damages, punitive damages, or consequential damages, including but not limited to loss of profits, loss of business revenue, goodwill, or anticipated damage to balance loss, and even if the possibility has been raised, whether the claim is based on contract, warranty, negligence, strict liability, or other liability. Under the circumstances that AVerMedia, its subsidiaries, suppliers and distributors assumes responsibility for damages caused by any reason, the amount of its total liability shall not exceed the actual payable of direct damages, nor shall it exceed the amount paid by the customer for the product.

Prejudice to the foregoing restriction does not apply to personal injury or death caused by injury, nor does it apply to the compensation required by law for AVerMedia to assume with regards to real or tangible property.

Where the law does not exclude or limit incidental or consequential damages, the above limitations or exclusions may not apply to the customer.

#### **Other Rights**

This warranty provides the customer with specific legal rights. The customer may be subject to jurisdiction in accordance with the relevant laws in his or her district, but the customer is subject to the laws and regulations that govern the country or state where the product was originally purchased. This warranty does not affect any legal rights, including the limitations or exclusions laid out by this contract; instead, the control of the consumer goods sold is governed by the relevant laws or regulations born of consumer rights.

## 產品有限保固責任

保固期限內，本公司保證本產品在正常使用的情况下，無材料及製造上之缺陷。

本公司不保證本產品不會發生錯誤或出現任何運作中斷的情形。但本有限保固不包含下列狀況：

- 產品已過保固期
- 產品序號(貼紙)之變更、塗改，汙損無法辨識或移除
- 非透過當地授權經銷商售出的產品
- 未經本公司同意，自行變更本產品之設計或委由第三人進行維修而造成之產品異常。
- 未依照使用手冊進行使用導致產品之瑕疵、異常或損壞
- 使用第三人之軟體、裝置或電腦病毒導致產品之瑕疵、異常或損壞
- 不正確的安裝或是連接其他外部裝置導致產品之瑕疵、異常或損害
- 測試不當，操作不當，濫用，誤用，意外，疏忽，改建，腐蝕，或無可預防的未知行為所造成產品的損害如產品之損害係受天災（水災、火災、地震、雷擊等）及人禍（如暴動、戰爭、核子災害）、人為之故意破壞（如敲打、破裂等）（如外觀損傷破裂、受潮、暴露於溫、溼度過高/過低、電源超過負荷、放置位置密閉不通風/堆疊及其他類似之極端環境、摔機、液體浸滲.....等）、自然耗損、環境因素、電源失調、人為疏忽或其他非正常使用致者。
- 隨附於產品中或後續使用者自行取得的任何軟體程式。
- 其他非本公司因素所造成。

## 保固期間

產品的保固期限，除本公司另有指定外，將自您取得之銷售收據或發票上所示之購買原始日期起計算，享有本公司保固服務。保固期隨產品不同而有差別，請查看你的產品外包裝或是詢問您購買產品之店家，以便進一步了解本產品的保固期間。

## 提出保固服務需求時請注意下列事項

- 發票上需有店家有效之註冊名稱或店章且售出之產品品名必需能有效清楚識別為該產品方可受理。
- 保固服務之申請應向原購買之店家或經銷商申請，若向它國或地區購買之產品，該保固服務仍請至原購買之店家或經銷商申請。
- 當產品或零組件被更換時，使用者取得替換商品的所有權，而被替換之之商品所有權將歸屬於 AVerMedia 或其經銷商。

為檢測或維修的需要，維修單位有權逕行將本產品回復原廠設定，如果因此而導致送修資料的遺失，本公司、維修單位均不負任何責任。且本保固服務並不包含協助您將儲存於本產品內的資料予以備份或恢復，請您於送修前自行備份或妥善保存產品內之所有

程式與資料。本公司維修單位有權移除非保固範圍內的所有功能、零件、配件、改裝物或附加物。

### **使用者連絡資料之使用**

如您依據本保固取得服務，即表示您同意且已充分授權本公司 儲存、使用及處理保固服務之相關資訊，以及您的聯絡資訊，包括姓名、電話號碼、地址及電子郵件地址。本公司 得以使用此資訊執行本保固所提供之服務。本公司可能會聯絡您以便瞭解因使用產品所發生的問題、對保固服務過程及結果的滿意度，或告知產品回收或安全問題的相關資訊。為達成這些目標，您需完全授權 AVerMeida 本公司 將您之資訊轉移至您購買本產品所在之國家或地區，提供予圓剛科技股份有限公司的當地維修單位或是維修代理機構，以進行保固服務。本公司亦可能於法律要求下揭露此資訊。

### **保固服務類型**

提供的服務可能因地理區域而異。若您自當地店家購得產品，可連絡本公司或其經銷商，確認產品所適用的服務回應方式。本公司提供的保固服務方式包括：

#### **a. 客戶運送服務**

依據「客戶運送服務」，客戶需自行付費將產品送到指定的服務中心進行修繕或更換，且所有風險由客戶自行承擔。於產品經修繕或更換後，客戶即可取回。若客戶未能取回該產品，本公司得以自認合適的方式處理產品，且無需負任何賠償責任。

#### **b. 郵寄服務**

依據「郵寄服務」，客戶需自行付費將產品郵寄至指定之服務中心進行修繕或更換，且所有風險由客戶自行承擔。於產品經修繕或更換後，本公司會自費將產品送還給客戶並承擔所有風險，惟服務經銷商另有規定者不在此限。

#### **c. 客戶雙程郵寄服務**

依據「客戶雙程郵寄服務」，客戶需自行付費將產品送到指定之服務中心進行修繕或更換，且所有風險由客戶自行承擔。於產品經修繕或更換後，即可將產品送還給客戶，運送費用及風險均由客戶自行承擔。若客戶未能安排取回產品之運送事宜，本公司得以自認合適的方式處理該產品，且無需負任何賠償責任。

#### **不提供到府服務**

AVerMeida 及其經銷商皆無提供到府維修、安裝、教學、排解使用問題的服務，如產品有使用上的問題或需進行修繕或更換，AVerMeida 及其服務經銷商會嘗試透過電話、電子郵件或遠端輔助方式來診斷及解決問題，若透過電話、套用軟體更新...等等皆無法解決問題，本公司 及其經銷商將依據「產品保固服務類型」- a 點來進行排程維修。

## 責任限制

本公司 僅就產品於下列情況所遭受之毀損或滅失負責：本公司持有產品時，或本公司所負擔之運送途中。

對於產品內之任何資料（包括機密資訊、專有資訊或個人資訊）遺失或遭人揭露，本公司 或服務經銷商皆無需負任何責任。

於任何情況下，即使本保固所規定之救濟方式未能達成其基本目的者，本公司、其子公司、供應商、及經銷商均無需就下列任何情況負擔賠償責任：(a)客戶端資料遺失、損毀或遭人揭露；(b)特殊損害、附帶損害、懲罰性損害、間接損害或衍生性損害，包括但不限於利潤損失、營業收益損失、商譽損害或預期結餘損失，且縱使已被告知有此可能性者，無論索賠係基於契約、保固、疏失、無過失責任或其他責任者，亦然。任何情況下，本公司、其子公司、供應商及經銷商就任何原因所造成之損害，其應付之賠償責任總額不得超過實際直接損害的金額，亦不得超過您購買產品所支付的金額。

前述限制不適用於人身傷害或死亡所致損害，亦不適用於 本公司 需依法賠償的不動產或有形財產的損害。

倘若法律規定不得排除或限制附帶或衍生性損害，則上述限制或排除條款可能不適用於客戶。

## 其他權利

本保固賦予您具體特定之法律權利。您依所屬管轄地區的相關法律，可能享有其它權利，但僅適用於原購買國家或地區的產品。本保固將不影響任何法定權利，包括不得以契約免除或限制之，由管制消費類商品銷售的相關法律或規定所生的消費者權利。

## FCC NOTICE (Class B)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Federal Communications Commission Statement

NOTE- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

### CAUTION ON MODIFICATIONS

To comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed in computer equipment certified to comply with the Class B limits. All cables used to connect the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception.

Changes and modifications not expressly approved by the manufacturer or registrant of the equipment can void your authority to operate the equipment under Federal Communications Commission rules.

### European Community Compliance Statement



Class B

This product is herewith confirmed to comply with the requirements set out in the Council Directives on the approximation of the laws of the Member States relating to Electromagnetic Compatibility Directive (EMC) 2014 / 30 / EU, Low Voltage Directive (LVD) 2014/35/EU.

Responsible manufacturer:

AVerMedia Technologies, Inc.

No. 135, Jian 1st Rd., Zhonghe Dist., New Taipei City 23585, Taiwan

TEL: +886-2-2226-3630

Technical Support: <http://www.avermedia.com/avertv/support/>

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada."

# EAC

EMC TR CU 020/2011



이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

- [illegible]

- غەيرى ئىسسىق بەلباغ ھاۋا كىلىماتى شارائىتىدىلا بىخەتەر ئىشلەتكىلى بولىدۇ
- Dan hab yungh youq gij dienheiq diuzgen mbouj dwg diegndat haenx  
ancienz sawjyungh.
- 仅适用于海拔 2000m 以下地区安全使用。
- 《2000m ئەلچاننىڭ تەبىئەت رايونىدا ھەممەي ئىشلىتىشقا مەنئىي قىلىندى.》
- “**ཏྲ་མཚོའི་རྩ་ལས་མགོ་ཚད་མི་2000མན་གྱི་ས་བྲུལ་ཁོ་ན་ན་མེད་བེད་སྤྱད་བྱས་འཇུག།**
- دېڭىز يۈزىدىن 2000 مېتر تۆۋەن رايونلاردا بىخەتەر ئىشلەتكىلى بولىدۇ
- Hai dou gaxgong, wngdang sien duenh denvasen bae.



The mark of crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.