


【① PS3 → GS31x & TV】

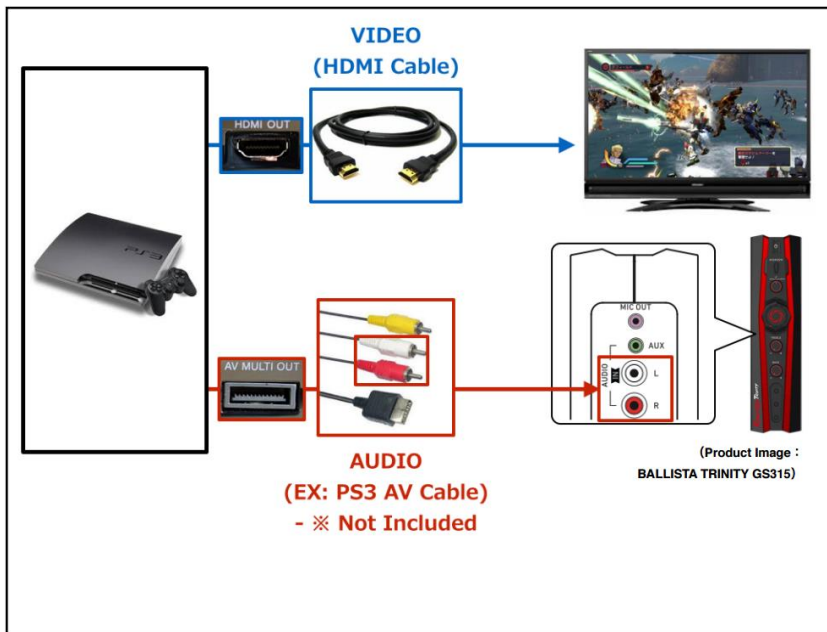

【Configuring the PS3 Video & Audio Settings (Video Output : HDMI & Audio Output : AV MULTI)】

Step 1 : Video Output Setting

After powering on the PS3, go to [Settings] → [Display Settings] → [Video Output Settings]




Select **[HDMI]**



Step 2 : Audio Output Setting


Go to **【Settings】** → **【Sound Settings】** → **【Audio Output Settings】**

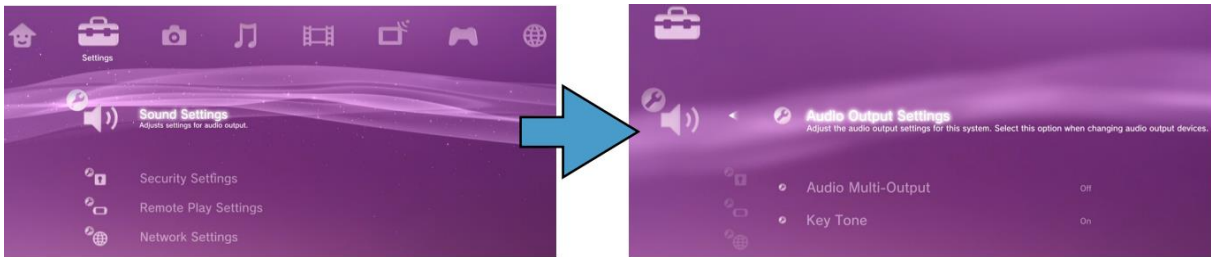

Select **【Audio Input Connector / SCART / AV MULTI】**



【② PS3 → TV → GS31x】

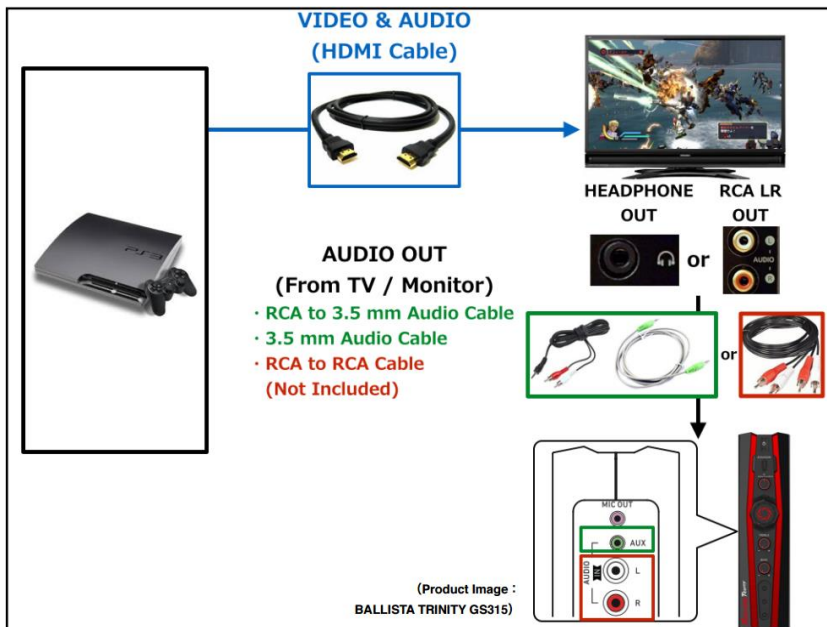

【③ PS3 →
Gaming Capture → PC → GS31x】



【④ PS3 →
PC-Free Type Gaming Capture → GS31x & TV】

